

quickeTM


User Instructions




ARBOREAL EQUIPMENT

US Patent No. 12,104,676
US Design Pat. No. D1,039,347


quickeTM setup with throw weight

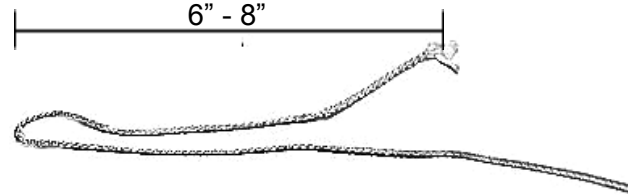


1. Take a bite of throwline 6" - 8" from an end.

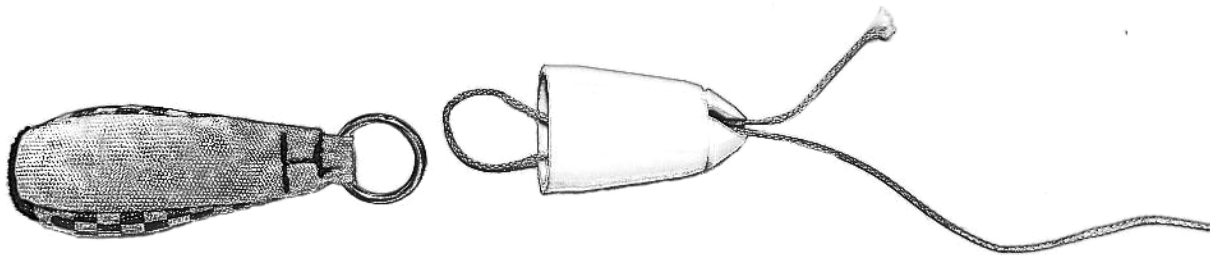


2. Feed bite through the nose of the quickeTM.

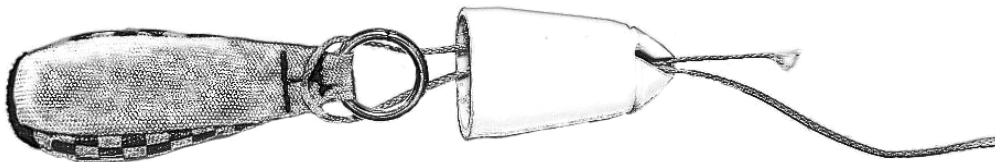

3. Slip loop of throwline over ring of throw weight.

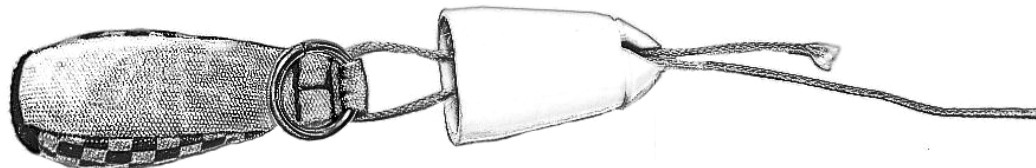


4. Fold ring over.

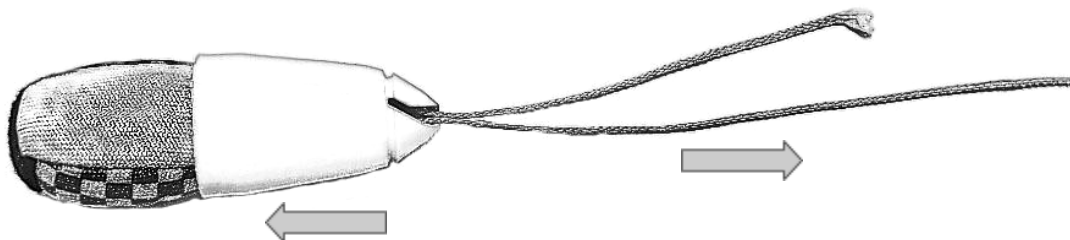


5. Pull throwline and quickeTM away from each other to pull weight into the quicke.

NOTE In certain rare cases, due to the construction of some throw weights, the quickeTM may need a slight modification. If at this stage, it takes an excessive amount of force for the throw weight to pull up into the quickeTM, take a small straight file and file down the top millimeter or so of the two nubs inside of the quickeTM.


View from below
quickeTM:

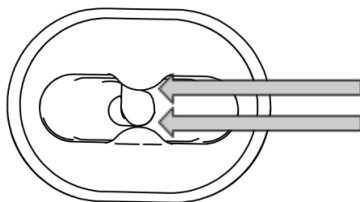


ONLY if it takes excessive force to pull throw weight in, file these nubs slightly.

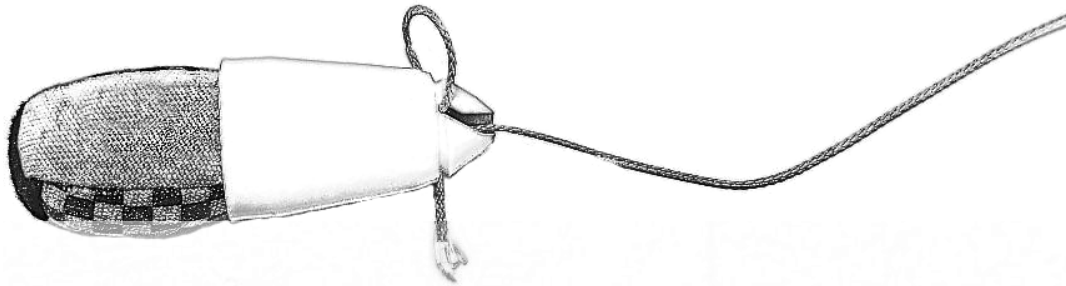

6. Take tail of throwline and loosely place it in groove around quickee™.

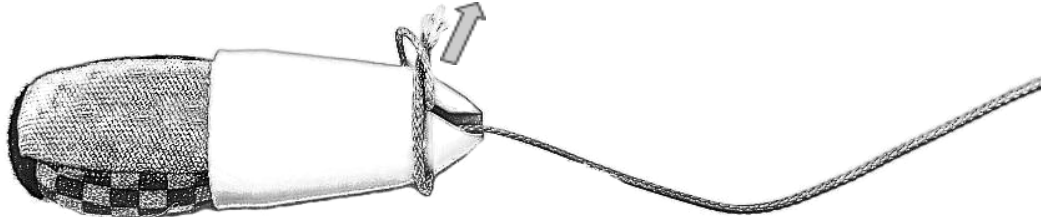


7. Lock by hitching the tail underneath itself.

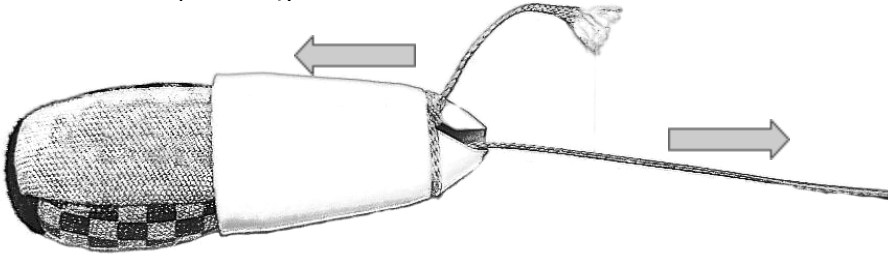


8. Pull quickee™ and working end of throwline away from each other. This snugs the half hitch and pulls the weight tight up into the quickee™, locking it.

After setting throwline

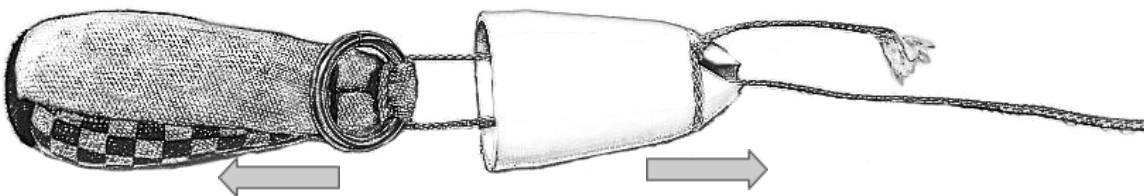

9. To remove throw weight, simply pull the throw weight away from the quickee™.

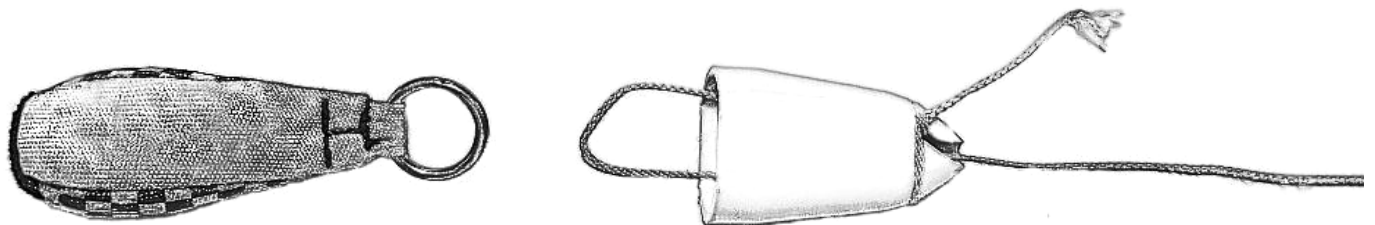


Pulling up rope using quickee™

After the throwline is installed over desired crotches and throw weight has been removed but throwline is left installed on the quickee™, it can be utilized in pulling the working rope into place.




10. Place end of working rope through loop of throwline left over from step 9.

*For ropes larger than ½" diameter that do not fit into quickee™, use half hitches to secure throwline to rope.

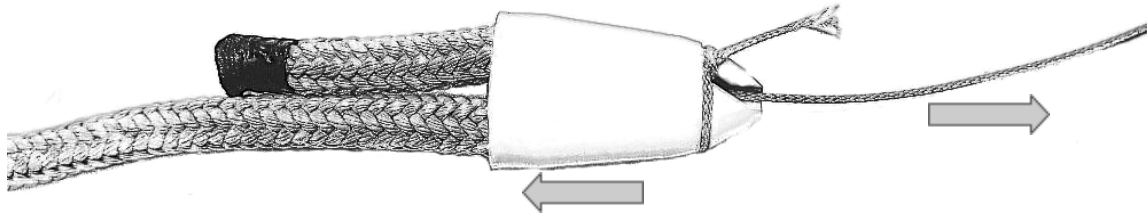


11. Pull working end of throwline and quickee™ away from each other.

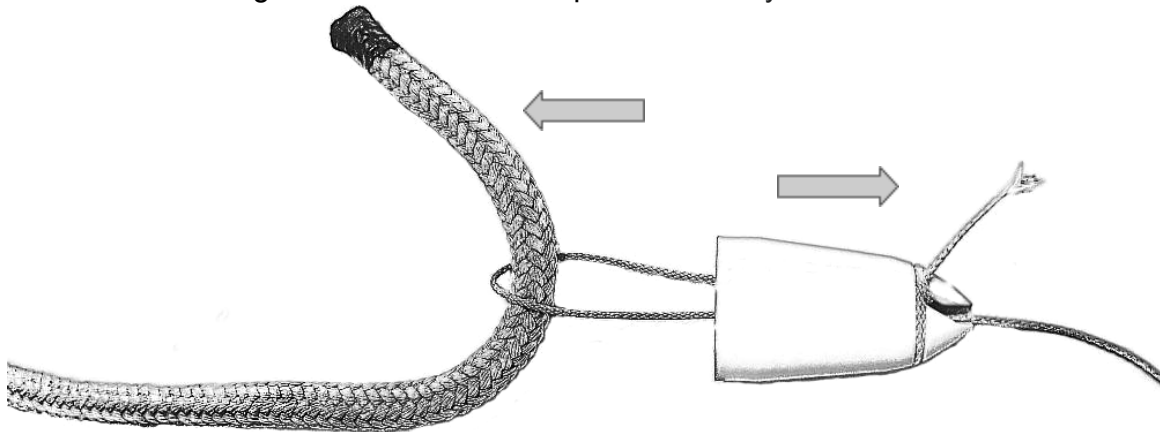


12. To remove working rope from quickee™, simply pull the rope and quickee™ away from each other.

Removing throwline from quickee™

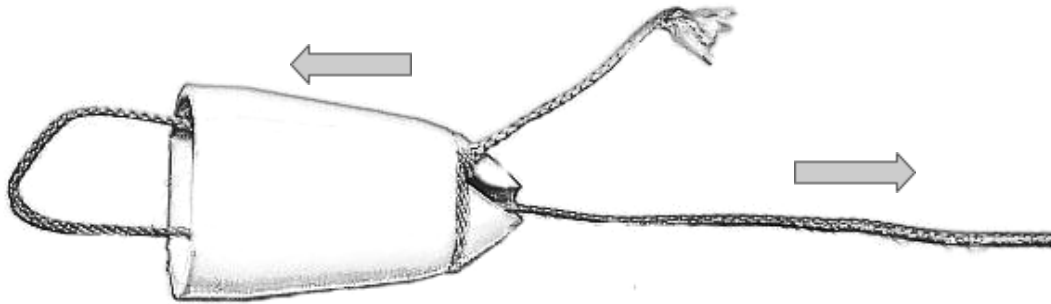

13. To remove quickee™ from throwline after use, simply pull quickee™ and working end of throwline away from each other.

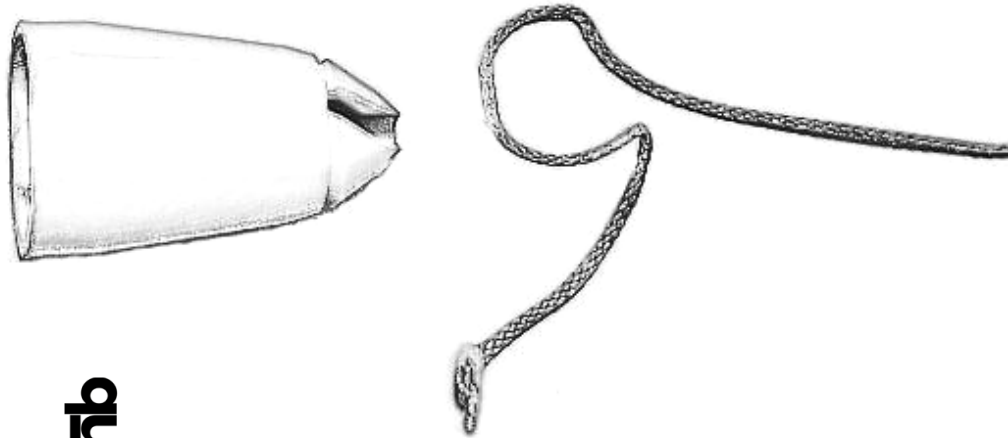


What if I throw two-handed?

A weight and quickee™ can easily be thrown two handed:

1. tie a slip knot close to the quickee™
2. feed a bite of throwline through the loop created by the slip knot

✓ Slip knot works just like the ring but comes undone after throw

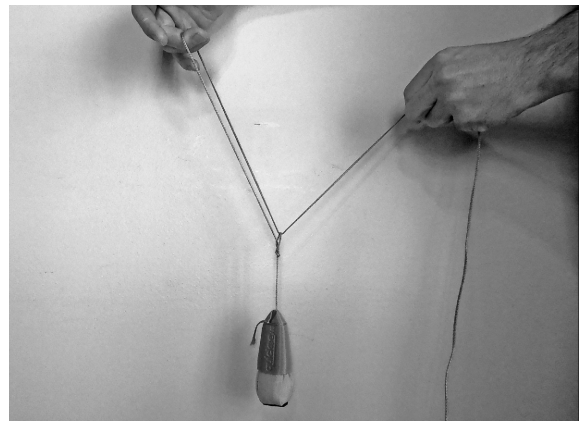

User
Instructions

Arboreal Equipment
439 S. Hermitage Rd. Suite #1015
Hermitage PA 16148
info@arborealtree.us